



The ED3-AT SkidWeigh Plus Series

- Turn on ignition switch
(Without operator ID# function or RFID card reader the LCD Display will show date / time)
- **Note:** With LCD display showing “ENTER ID NUMBER”, input any valid operator ID # (Range 1 to 999), maximum 3 digits and press “Enter key”. System with RFID reader, scan valid operator card.
- The LCD display will show date / time. System is ready to operate.



Insert the forks into the pallet or product to be weighed

- Lower the loaded forks to the ground.
- With LCD showing date / time, lift load just above the ground
- Do not manipulate the tilt, side shifter or move vehicle
- LCD display will show “PLEASE WAIT”.
- Within few seconds load weight will be indicated on LCD display. If you press “P key” the indicated load weight will be saved to USB.
(With optional onboard printer load weight ticket will be provided)



System with RFID Card reader



USB port with cover



Optional mobile printer



Accumulative Load Weight Function

- With LCD display showing load weight, press **“Enter key”** to start accumulating loads
- With last load weight lifted and shown on LCD display by pressing **“P key”** all individual loads and total load weight printed (Printer available) and saved to USB.
- The USB recordings are in Excel file reporting format

