



### The ED3-IM SkidWeigh Plus Series (Onboard weight scale, impact monitoring)

- Turn on ignition switch  
*(Without operator ID# function or RFID card reader the LCD Display will show date / time)*
- **Note:** With LCD display showing “ENTER ID NUMBER”, input any valid operator ID # (Range 1 to 999), maximum 3 digits and press “Enter key”. System with RFID reader, scan valid operator card.
- The LCD display will show date / time. System is ready to operate.



#### Insert the forks into the pallet or product to be weighed

- Lower the loaded forks to the ground.
- With LCD showing date/time, lift load just above the ground
- Do not manipulate the tilt, side shifter or move vehicle
- LCD display will show “PLEASE WAIT”.
- Within few seconds load weight will be indicated on LCD display. If you press “P key” the indicated load weight will be saved to USB.  
*(With optional onboard printer load weight ticket will be provided)*



System with RFID Card reader



USB port with cover



### Accumulative Load Weight Function

- With LCD display showing load weight, press **“Enter key”** to start accumulating loads
- With last load weight lifted and shown on LCD display by pressing **“P key”** all individual loads and total load weight will be saved to USB.
- The USB recordings are in Excel file reporting format



*Optional onboard printer*

**Impact Detection / Recordings** are shown on LCD display and are recorded to USB

