




- Turn on ignition switch  
*(Without operator ID# function or RFID card reader the LCD Display will show date / time)*
- **Note:** With LCD display showing “ENTER ID NUMBER” input valid operator ID # (Range 1 to 999), maximum 3 digits and press “Enter key” ←
- System equipped with RFID card reader, scan valid operator card.  
The LCD display will show Date / Time. **System is ready to operate.**

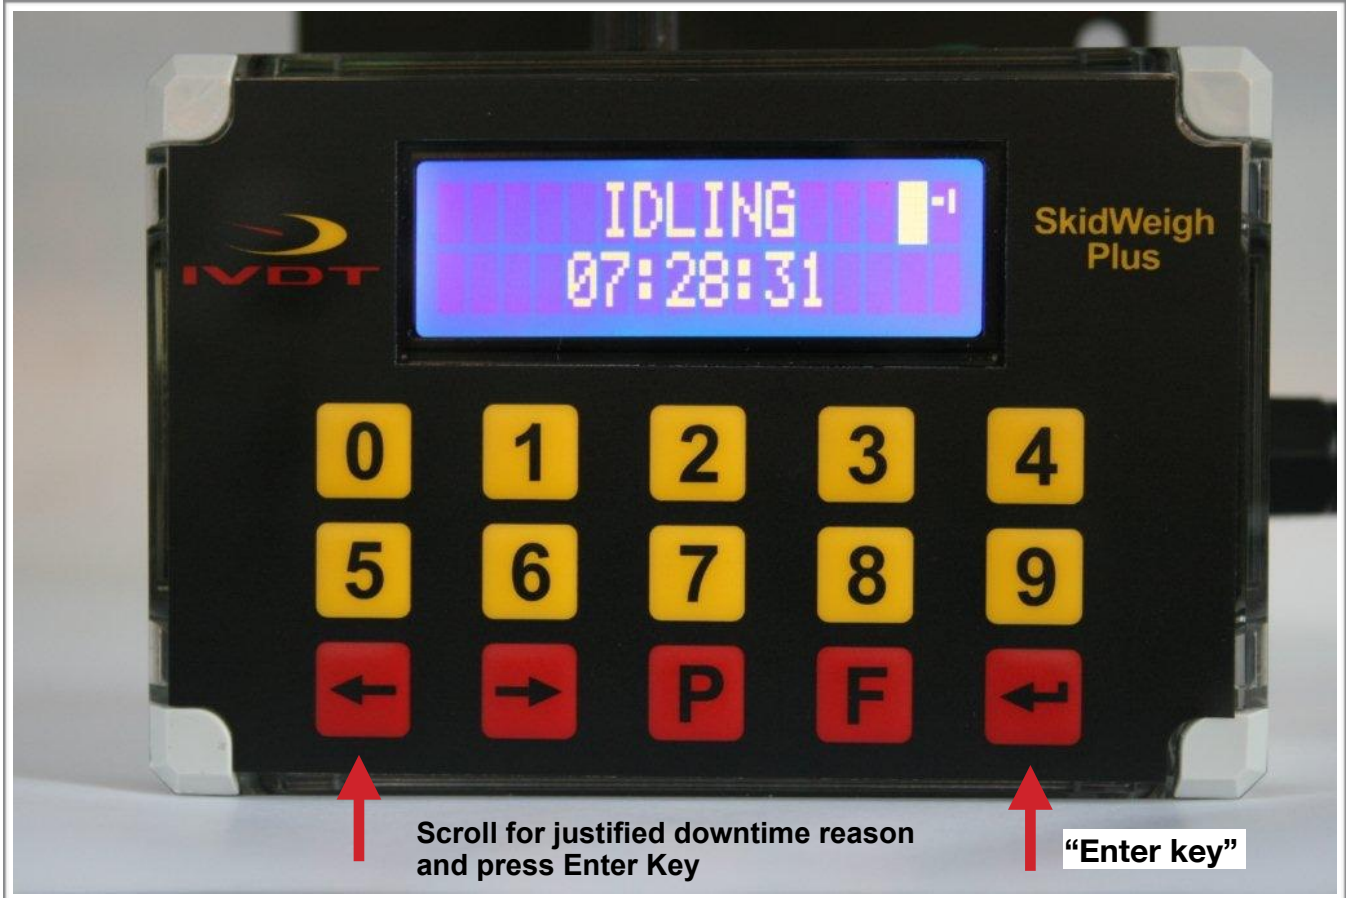

### Default operational utilization factor time is 30 seconds

When the system detect vehicle operational utilization factor that is exceeded the LCD display will show IDLING “OTHER”. Operator has about 5 seconds to start scrolling for justified operational downtime reason or unidentify “OTHER” downtime reason will be recorded.

The IDLING message shown on LCD display will be automatically cancelled as soon as vehicle is in normal operational mode.

The LCD message will show Date / Time.

