

# Installation & Calibration Manual



## **ED3/ED4-EP SkidWeigh Plus Series**

### **Electric Pallet Truck Check Weighing Scale**

*Lift Hydraulic Pressure Transducer*

ED3/ED4-EPV1147

## General Installation Guide

This **ED3-EP** and **ED4-EP SkidWeigh Plus V147** guide describes how to install, calibrate, test and use your on-board check weighing scale for electric pallet truck. Following the instructions in the **ADMINISTRATION MENU** you will be able to get the system set up and use quickly. In the event that you require additional assistance, please visit [www.skidweigh.com](http://www.skidweigh.com) to watch short calibration video.

**Note:** All EP systems are supplied with **additional two black wires** to accommodate installation to some older electric pallet trucks having variety of different lift motor pump solenoids and mechanical lift limit switch. **The majority of newer vehicles with proximity sensor lift limit switch do not require connection of two black wires.** The software algorithm will automatically identify and calibrate both, the older vehicles when interfacing **lift motor pump solenoid is required** the vehicles that are equipped with **proximity sensor lift limit switch**.

Regardless of the vehicle electrical configuration when performing weighing calibration function you must lift empty, loaded forks and during the normal weighing cycle by **activating and holding lift control valve until lifted forks will stop automatically.**

## Safety

Always disconnect the vehicle battery while installing SkidWeigh system or any other electronic product. Make sure that indicator, pressure transducer and any other associated cables are securely mounted and do not impede any of the vehicle's controls. Use care when routing the components cables. Route the cables where they will be protected. Use commonly accepted install practices for after market industrial vehicle electronic devices. The installation of the SkidWeigh systems should only be performed by an acknowledged lift truck dealer technician or end user electro and hydraulic technical installer.

Here are two acceptable methods of making a wire connections:

- \* Soldering your connections (recommended)
- \* Crimp connectors (with the use of the proper crimping tool)

Regardless of the method you choose, ensure that the connection is mechanically sound and properly insulated. Use high quality electrical tape and shrink tubing where necessary. This product is connected directly to the vehicle's ignition switch, 12 to 55 VDC.

## Electro-Magnetic Compatibility

CE conformity to EC directive 89/336 (EMC) by application of harmonized standards: Interference stability EN 61000-6-2 and EN 61326-1 interference emit EN 61000-6-3, EN 61326-1 for the pressure transducer.

## ED3/ED4-EP SkidWeigh Plus Series

Our policy is one of continuous improvement and the information in this document is subject to change without notice. The software version is displayed on the LCD display once the power is turned on to the system.

## Overview of components

The standard ED3/ED4-EP SkidWeigh Plus check weighing system consist of two main components:

- \* Digital indicator with wiring harness, mounting bracket and anti-vibration mount
- \* Hydraulic pressure transducer with 3 wires cable
- \* Installation & calibration manual and operator usage instruction



## Operation

The **ED3-EP** and **ED4-EP** SkidWeigh Plus operation is based on the hydraulic pressure transducer mounted in the vehicle lifting hydraulic circuit using specific software.. The load should be placed all the way in towards the load back guard. With the load lowered to the ground the LCD display will show time and date which is a starting point to initiate a load weight procedure.



## Operational Cycle

Operator must activate **lift control valve and hold it until forks are automatically stopped at the measurement height.** The increase in the hydraulic pressure signal will initiate specific “weighing cycle” measurement algorithm for activation of the lift accurate technology process that will automatically stop lifted forks. As soon the loaded forks are stopped the system will take a series of measurements and within 3-4 seconds the load weight will be shown on LCD display.



## Pressure transducer installation

The pressure transducer must be installed in the lifting hydraulic line **toward the bottom of the lift cylinder(s).**

Use T-piece in lifting hydraulic line to instal pressure transducer.

## Pressure transducer installation precautions

Before installation of the pressure transducer the hydraulic lift circuit must be pressure free.

Pressure transducer has 1/4"-18 NPT male thread. Use thread seal to ensure tight fit.

## Selecting the mounting location for digital indicator

**Note:** Use the mounting bracket with the anti vibration mount and fasten digital indicator on the vehicle dashboard. There are many examples of mounting locations that will depend on the vehicle model. However, additional mounting items such as a flat brackets may be needed to help secure digital indicator.



## Electrical connections

All SkidWeigh systems operate from 12 to 55 VDC.

- **Orange Wire (+) Ignition switch On position**
- **Brown Wire (-) Battery negative**
- **Red Wire, connect to RED wire of the pressure transducer cable**
- **Black Wire, connect to BLACK wire of the pressure transducer cable**
- **White Wire, connect to WHITE wire of the pressure transducer cable**

**Two Black wires are connected to internal relay, dry contacts located in ED3/ED4-EP digital indicator.** This relay is controlled by the microprocessor and will be activated only during the load weighing cycle. The relay configuration is SPST, normally closed contacts, 5 A current rating



### Older electric pallet truck

Example of two black wires used to interface to lift motor pump solenoid to control forks travel



**TWO BLACK WIRES**

## Pressure transducer




## Power short circuit protection

All SkidWeigh systems are internally short circuit protected with resettable fuse. There is no need to install external inline fuse in orange wire connected to the ignition switch.

**Note:** Any external devices connected to the SkidWeigh system, such as non standard onboard printer might require external fuse.

## OPTIONAL MODULES

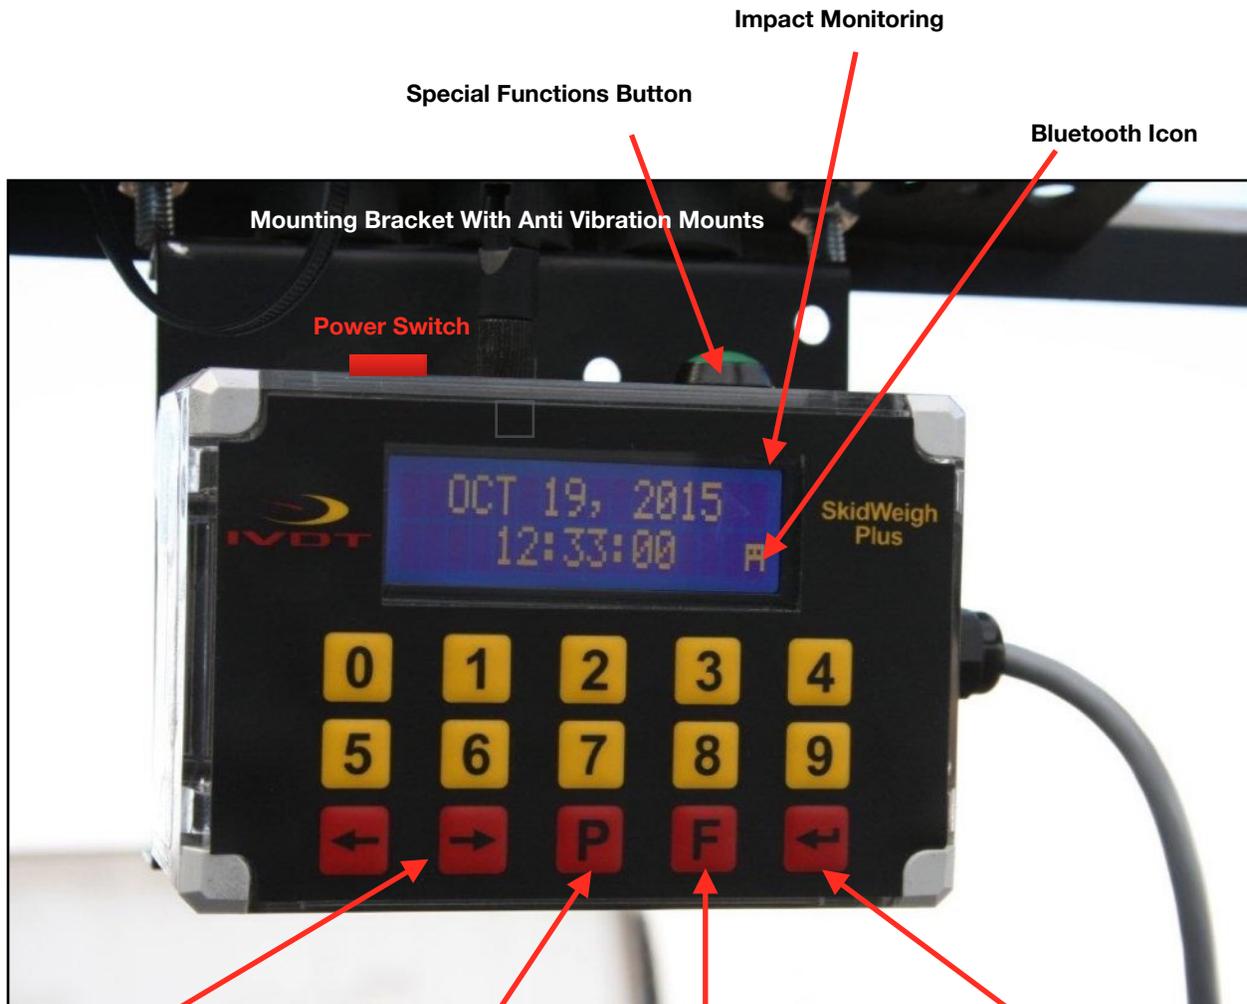

Impact Monitoring

Special Functions Button

Bluetooth Icon

Mounting Bracket With Anti Vibration Mounts

Power Switch

Use left ◀ and right ▶ arrow key  
for system set up

Print key or /and USB recording,  
SEND key to wireless base station

“Enter key” ↵

### FUNCTION MODE KEY

**F 9 ADMINISTRATIVE MENU** (Password protected)


**F 0 OPERATOR MENU**

Use < > keys for \*Bluetooth pairing, \*TARE set up and weight readout to be shown in kilograms

# Administrative Menu

The administration menu allows the *installation technician to calibrate system weighing function* (**SET CALIBRATION 1**) and for the end user to manage data, set vehicle ID#, time, utilization factor, impacts, etc., information available depending on the purchased hardware and software configurations.


To enter into the **Administration Menu**, press **F** key and than press **9** key.

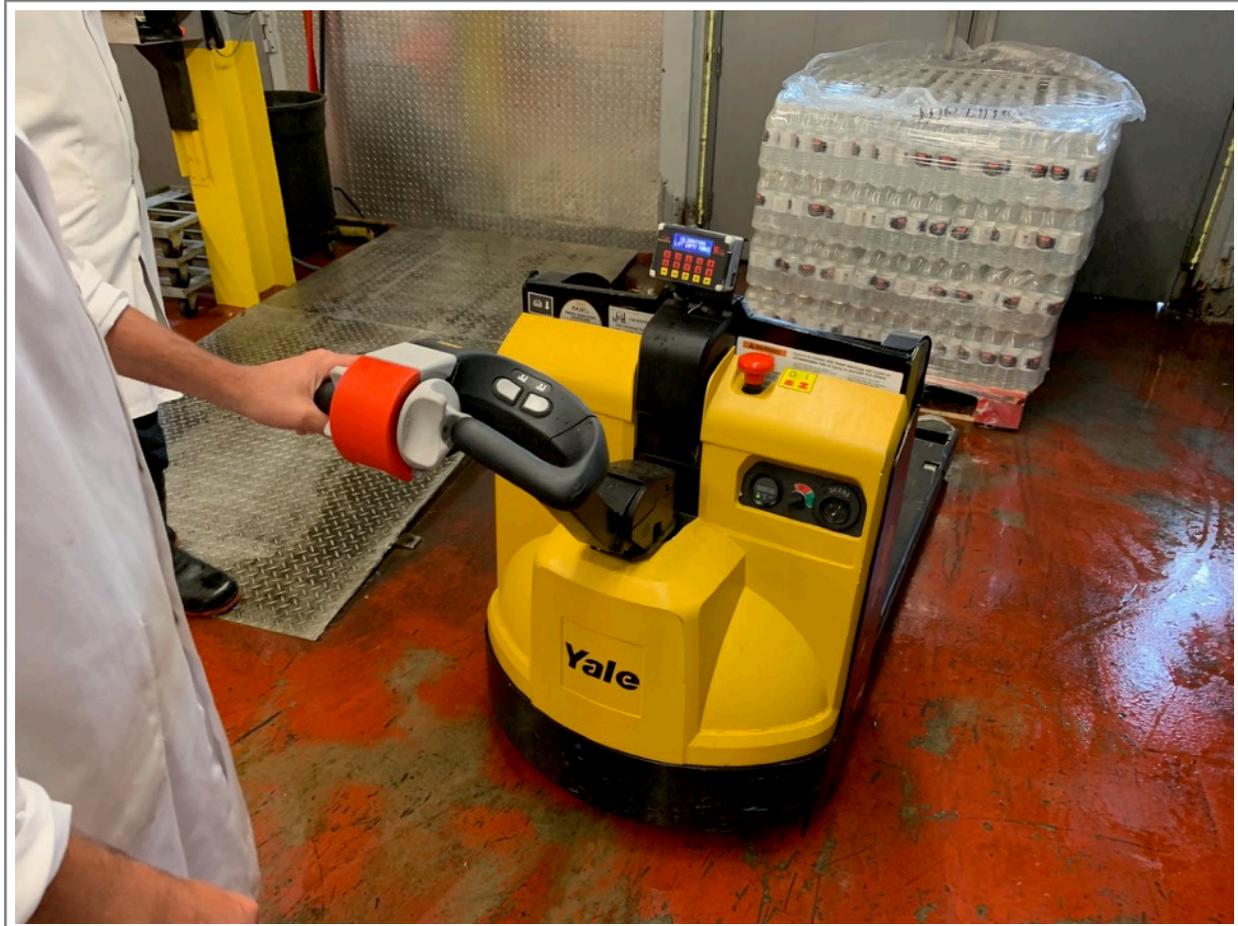


Input password **521**

Use **< >** keys to scroll for functions that might apply for your system configuration.

Follow the LCD instructions, use **“Enter key”** ↵ to confirm set up. Use **F** key to exit menu.

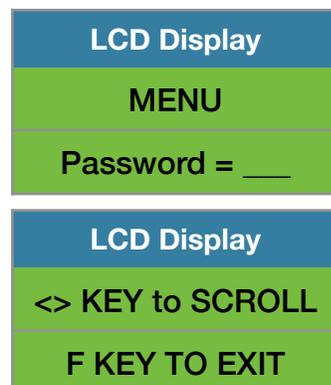


## Date / Time Set Up

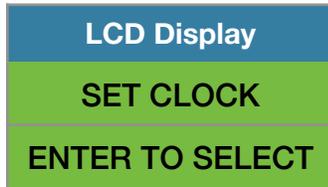

Use left ◀ and right ▶ arrow key (*bottom left side of the keypad*) to change from AUTO to MANUAL date/time set up.

**Note:** AUTO set up refers to system utilizing a wireless RF platform with automatic date /time update from IVDT Base station communication and programming hub.

For the applications without Base Station, use **SET CLOCK MANUAL** instructions.

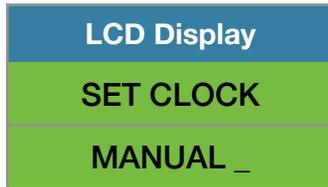

To set TIME / DATE follow the LCD instructions and press “**Enter key**” ↵ to confirm.



Press “**Enter key**” ↵ to confirm the setting. The cursor will automatically move to the next item to be changed ( Month, Day, Year, Hours, Minutes, Seconds). On the last correction, seconds item press “**Enter key**” ↵ to confirm new date / time set up.

## Set vehicle ID#

- Maximum input number for vehicle ID# is 3 digits. Press “**Enter key**” ↵ to confirm.



LCD Display
SET VEHICLE ID
ENTER TO SELECT
LCD Display
ENTER VEHICLE ID
1_
LCD Display
VEHICLE ID
CONFIGURATED

## Lift Accurate Technology (Older Vehicles)



Two **BLACK wires** are connected to the internal relay, dry contacts located in the **ED3/ED4-EP** digital indicator. This internal relay is controlled by the microprocessor and activate only during the load weighing cycle. **There is no power connected to these two BLACK wires.** Internal relay configuration is SPST normally closed contacts,10 A current rating.

### **Method A.** *(Electric pallet trucks with various CANbus controllers)*


Use two **BLACK wires** and “splice” them in series with the operator activated **lift control switch wire** or signal wire from electronic controller that is activating lift motor solenoid. The predetermined motion of the lifting cylinder and the load weight measurement “weighing cycle” will be initiated and controlled automatically by the software algorithm based on the input from the pressure transducer signal. Once the load weight is shown on the LCD display internal relay will be de-activated and the lift motion control event will be automatically enable.

(With vehicle stationary and during the lifting cycle diagnostic display on some vehicles might show “Fault” or “No power to lift motor” or audio signal might be activated for short time period.)

Consult vehicle wiring diagram or contact the OEM for the proper interface to control lift motor control

**Method B.** *(Some older electric pallet trucks with lift motor pump solenoid)*

Disconnect one of the original solenoid coil wire ( From either positive or negative terminal of the solenoid coil ) and **splice two BLACK wires in series to one disconnected wire and the other one to solenoid terminal.**

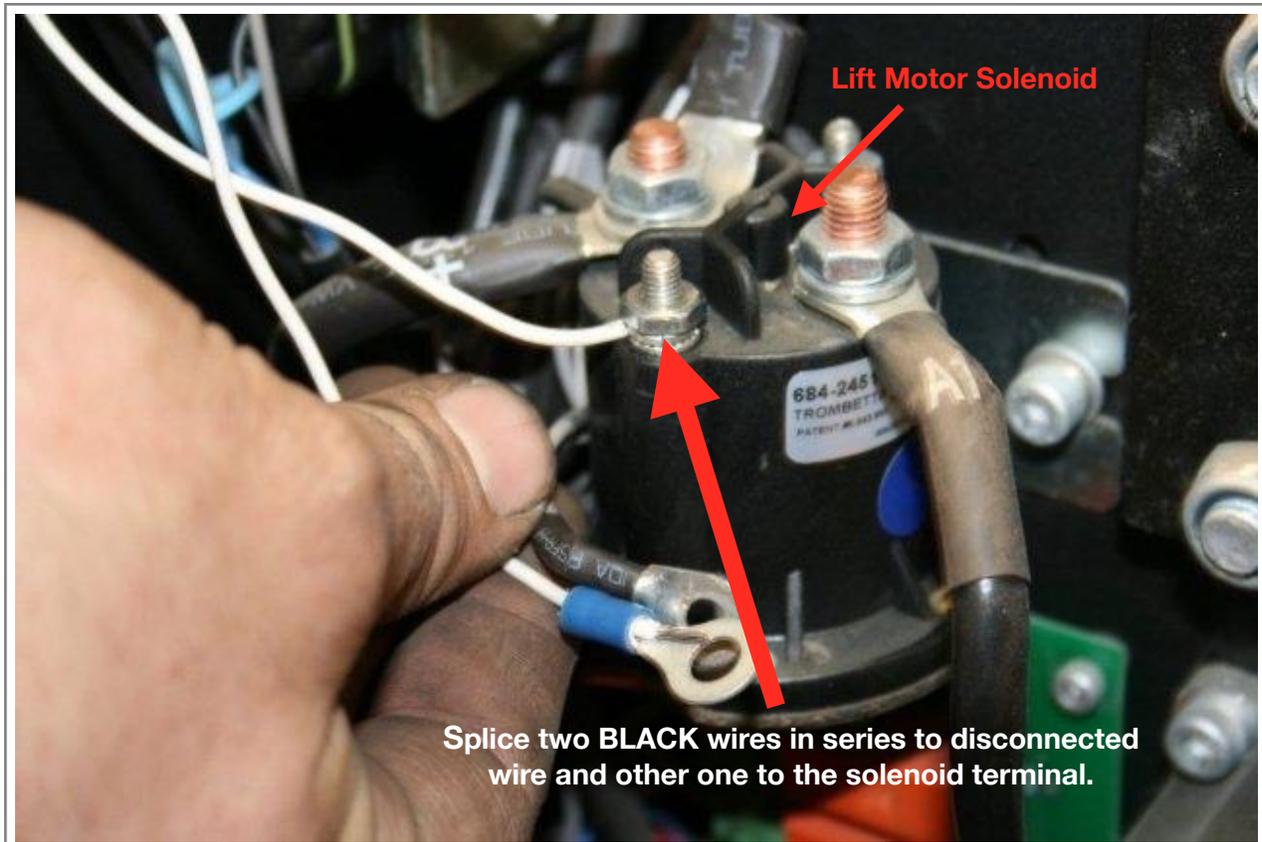

The predetermined motion of the lifting cylinder and the load weight measurement “weighing cycle” will be initiated and controlled automatically by the software algorithm based on the input from the pressure transducer signal.

Once the load weight is shown on the LCD display internal relay will be de-activated and the lift motion control will be enabled.

(With vehicle stationary and during the lifting cycle diagnostic display on some vehicles might show “ No power to lift motor” or audio signal might be activated for short time period. )

When unloaded vehicle is in motion the hydraulic “spikes from pressure transducer signal” might be seen by the vehicle controller as start of the “weighing cycle”. Short interruption of the power to the lift solenoid coil on “some controllers” could be seen as a “fault” and power to the vehicle will be cut.

## Lift Accurate Technology (Newer Vehicles)

### Electric Pallet Truck with Proximity Sensor Lift Limit Switch



For newer vehicles with **Proximity Electronic Lift Limit Switch** there is no need to use two black wires. During the system calibration and normal weighing cycle **activate and hold lift control valve until lifted forks will stop automatically**. The software algorithm will detect travel time of the forks until proximity sensor is activated and calculation will be recorded

### Weighing scale function calibration

The **ED3/ED4-EP SkidWeigh Plus** calibration is automatic and is done by lifting empty and loaded forks with known load weight. MAKE SURE THAT YOU HAVE A KNOWN LOAD WEIGHT AND KEEP IT NEARBY TO COMPLETE THE CALIBRATION. For the best results use at least minimum calibration load test weight of 30 to 50% of maximum lifting capacity of the lift truck. Use customer floor scale or find a known skid load weight within the operational facility.

#### IMPORTANT:

**The ED3-EP V1.47 SkidWeigh system MUST BE CALIBRATED WITH KNOWN LOAD WEIGHT IN POUNDS**

**Note:** Should operation require for load weight to be shown in kg, press **F** key and number **0** and change **WEIGHT DISPLAY** to Kilos after the system being calibrated in pounds.

### Calibration starting point




Lower the empty forks to the ground. There should be no hydraulic pressure in lift hydraulic circuit.

#### Follow instructions shown on the LCD display

To enter in the **Administration Menu**, press **F** key and then press **9** key and input password **521**.

Use left or right arrow keys to scroll to **“CALIBRATION 1”** menu.

Press **“Enter key”** ↵ and follow the LCD instructions.

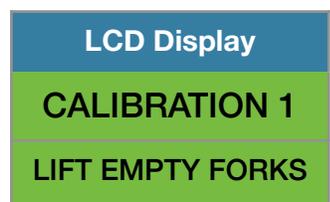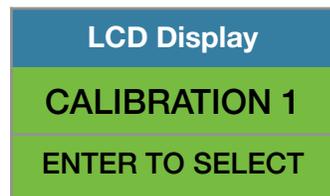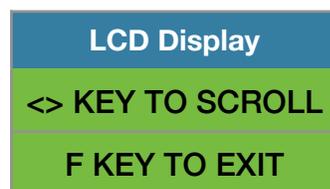

- **Activate and hold lift valve** until lifted empty forks are automatically stopped.

**System zero load value will be calibrated.** After few seconds the LCD display will show to lower forks




Lower the empty forks to the ground. The LCD display prompt you to input **known calibration load weight in pounds**.



Pick up a known load weight and **lower the loaded forks to the ground**.

*(Our example of the known load weight is 2000 pounds)*

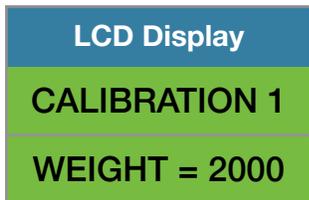

Input into the system the known load weight of 2000 into the LCD display and press **“Enter key”** ↵.

The LCD display will show



**Activate and hold lift valve** until lifted loaded forks are automatically stopped.



After few seconds the calibrated load weight value of 2000 will be stored in the system memory and LCD display will prompt you to lower **“LOWER FORKS”**.

**System weighing calibration function is completed.**

LCD Display

CALIBRATION 1

CONFIGURATED

As soon the loaded forks are lowered to the ground LCD will prompt you to press **F key** to exit the administration menu. The LCD display will **show Date / Time**.

LCD Display

AUG 28, 2010

12:25:23

**System is ready to be used.**

**Calibration of the ED3/ED4-EP system weighing function is finished**


**Saving recorded data to USB memory stick**



The **ED3/ED4-EP** SkidWeigh Plus system will allow you to download all recorded data to the memory stick. **Follow instructions shown on the LCD display**  
This function is located in **Administrative Menu**.




When the system has finished uploading the data to the USB memory stick the LCD display will prompt you to erase the SDRAM , all files contained on the SKidWeigh Plus ED3-EP. Once you have made your selection **Y** or **N** press “**Enter key**” ↵ to confirm selection and the system will automatically bring you back to the main

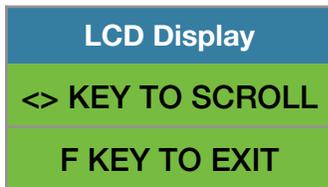

screen in the administrator menu. Press **F key** to exit the menu.



# Operator Usage Guide

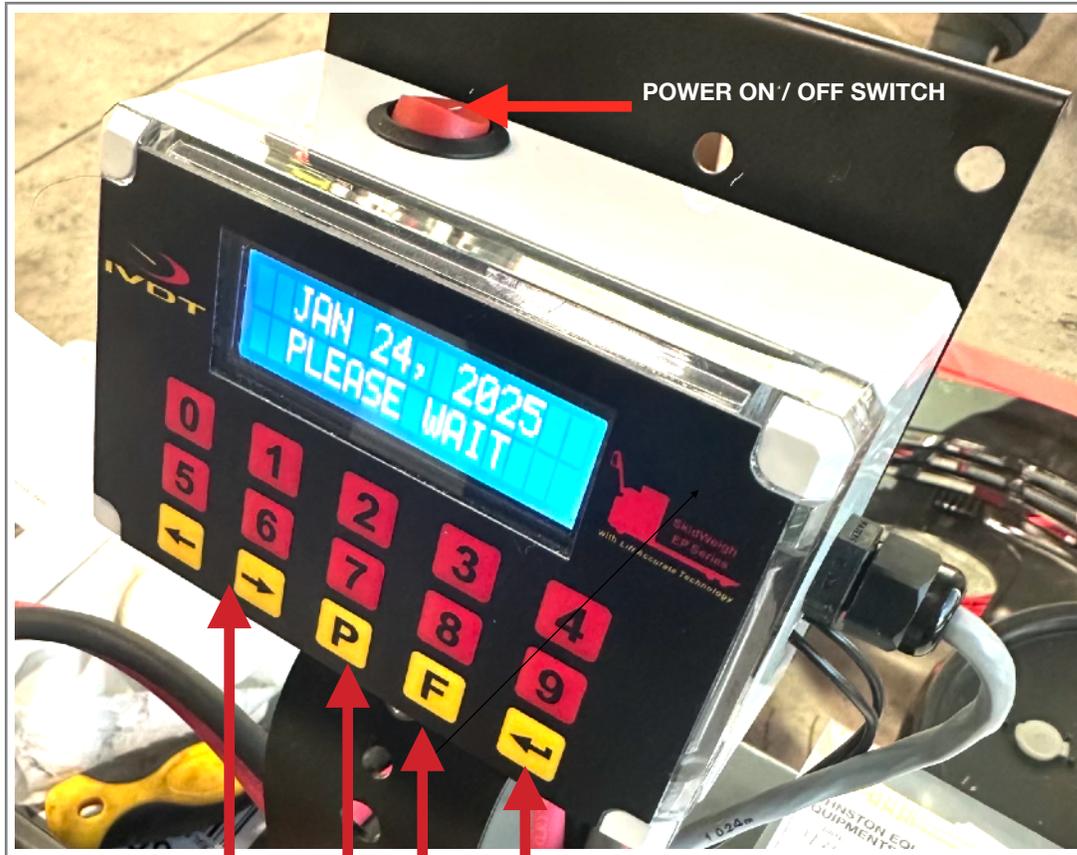

Scroll Keys Print Function Key "Enter key" ↵

## Turn on power to the system

- Insert forks into the pallet or under the product to be weighed
- Lower the loaded forks to the ground. LCD display must show Date / Time
- Activate lift valve switch and **hold it until lifted fork are automatically stopped**
- LCD display will show "PLEASE WAIT" and after few seconds a load weight will be shown



## “P” key Functions

- Systems with USB port by pressing “P” key load weight data will be recorded and can be downloaded to the memory stick at any time
- Systems utilizing RF wireless module by pressing “P” key load weight will be send to the base station

## Accumulative Load Weight Total

- With LCD display showing load weight by pressing “Enter key” ↵ the current value will be added into total counter. You can keep adding individual loads and when finished by pressing “P” key the accumulative load weight total will be printed, recorded to USB port or/and send to the base station.

## Waybill ID#

- With Waybill ID# function enabled by pressing “P” key you will be able to input valid Waybill ID number.

## Operator Menu *(Pressing F key and than press number 0)*

Depending on the system configuration the operator menu by pressing F key and than pressing 0 key allows operator to do a following:

**BLUETOOTH PAIRING** (Systems with onboard printer or scanner)

**TARE** function (Input of Tare value when using the weighing function)

**PARTS COUNT** by weight (Input for individual part weight)

**LOAD WEIGHT SHOWN IN KILOGRAMS**

**Note:** *Factory default load weight shown on the indicator is in pounds*

To change load weight to be shown in kilograms operator must press F key and then press number 0.

Use < > keys until LCD display is showing

**WEIGHT DISPLAYED**

**ENTER TO SELECT**

Press “Enter key” ↵. The LCD display will show

**DISPLAYED WEIGHT**

**POUNDS**

Use < > keys to select kg or back to the pounds and press “Enter key” ↵.